 


nüvi[®] 42/52 series

Quick Start Manual

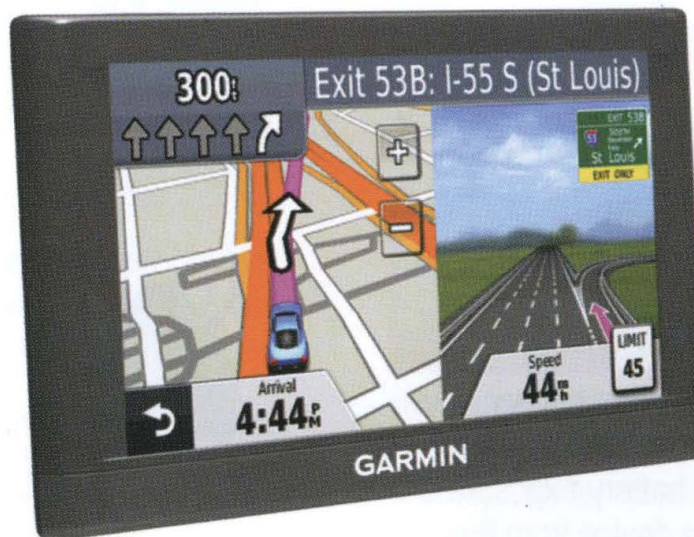

November 2012

190-01530-01_0A

Printed in Taiwan

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- 1 Connect the device to vehicle power (page 2).
- 2 Mount the device (page 2).
- 3 Register the device (page 3).
- 4 Check for updates.
 - Software updates (page 3).
 - Free map update (page 3).

Mounting the Device

WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the

vehicle when exiting or store it out of direct sunlight.

NOTICE

Before mounting the device, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

Charge your device as you drive before using it on battery power.

- 1 Press the suction cup  to the windshield.



 
- 2 While pressing, flip the lever ② back toward the windshield.
- 3 Press the mount ③ up and into the opening on the back of the device until it snaps into place.
- 4 Plug the vehicle power cable ④ into the USB port ⑤ on the device.
- 5 Plug the other end of the vehicle power cable into a power outlet in your vehicle.
- 6 Snap the mount onto the suction cup ⑥ arm.

About Garmin Express

Use Garmin Express to register your device, check for software and map updates, access product manuals and support, and more.

Setting Up Garmin Express

- 1 Connect a USB cable ① to the mini-USB port ② on the device.

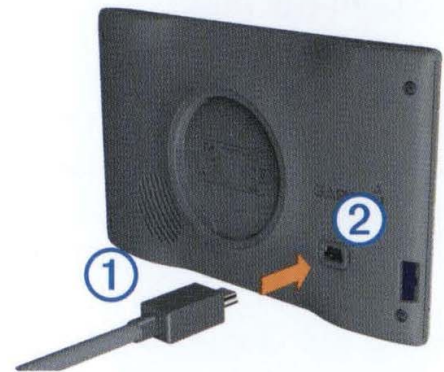

- 2 Connect the other end of the USB cable to the USB port on your computer.
- 3 Go to www.garmin.com/express.
- 4 Follow the on-screen instructions.

nüMaps Guarantee™

If you register the device at www.garmin.com/express within 90 days of acquiring satellites while driving, your device could be eligible for one free map update. Go to www.garmin.com/numaps for terms and conditions.

Activating Lifetime Maps

- 1 Go to www.garmin.com/lifetimeupdater.
- 2 Follow the on-screen instructions.

NOTE: If you register the device, you can receive e-mail notifications when a map update is available.

 
Downloading the Owner's Manual

The owner's manual for your device is available on the Garmin web site.

- 1 Open Garmin Express (page 3).
- 2 Click **Manuals**.
A list of the product manuals in several languages appears.
- 3 Click **Download** next to the manual you want.
- 4 Save the file to your computer.

Turning Off the Device

- 1 Tap the **Power** key ①.

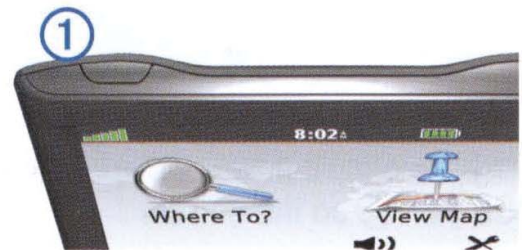

- 2 Select **Power Off**.

Resetting the Device

You can reset your device if it stops functioning.

Hold the **Power** key for 10 seconds.

Changing the Screen Brightness

- 1 Select **Settings > Display > Brightness**.
- 2 Select  or .

Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:

- Select  or .
- Select the **Mute** check box.

About Points of Interest

The detailed maps loaded in your device contain points of interest, such as restaurants, hotels, and auto services.

Finding a Point of Interest by Category

- 1 Select **Where To? > Points of Interest**.
- 2 Select a category.
- 3 If necessary, select a subcategory.
- 4 Select a location.
- 5 Select **Go!**.

Searching Within a Category

To narrow your search results, you can search within some categories.

- 1 Select **Where To? > Points of Interest**.
- 2 Select a category.

- 3 If necessary, select a subcategory.
- 4 Select **Spell**.
- 5 Enter all or part of the name.
- 6 Select **Done**.

Searching Near Another Location

By default, your device finds locations closest to your current location. You can find a location near another city or location.

- 1 Select **Where To? > Near**.
- 2 Select an option, and select **OK**.
- 3 If necessary, select a location.

Adding a Stop to a Route

- 1 While navigating an automobile route, select **Where To?**.
- 2 Search for the location.
- 3 Select **Go!**.
- 4 Select **Add as a Via Point**.

Saving a Home Location

You can set your home location for the location you return to most often.

- 1 Select **Where To? > Go Home**.
- 2 Select **Enter My Address, Use My Current Location, or Choose from Recently Found**.

The location is saved as “Home” in Favorites.

Following an Automobile Route

NOTICE

The speed limit icon feature is for information only and does not replace the driver’s responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

The route is marked with a magenta line. A checkered flag marks your destination.

As you travel, the device guides you to the destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, the device recalculates the route and provides new directions.


An icon displaying the current speed limit may appear as you travel on major roadways.



Taking a Detour

While navigating a route, you can use detours to avoid obstacles ahead of you, such as construction zones.

NOTE: If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

- 1 While navigating a route, select  to return to the main menu.
- 2 Select **Detour**.

Stopping the Route

While navigating a route, select  > **Stop**.

Favorites


You can save locations in your Favorites so you can quickly find them and create routes to them. Your home location is also stored in Favorites.

Saving Your Location to Favorites


- 1 From the map, select the vehicle icon.
- 2 Select **Save Location**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

The location is saved in Favorites.

Using Help

Select  to view information about using the device.

www.garmin.com/express

 913-397-8200
1-800-800-1020

 0808 238 0000
+44 870 850 1242

 1-866-429-9296

 43 (0) 3133 3181 0

 00 32 2 672 52 54

 00 45 4810 5050

 00 358 9 6937 9758

 00 331 55 69 33 99

 0180 5 / 42 76 46 - 880

 00 39 02 3669 9699

 0800-0233937

 815 69 555

 00800 4412 454
+44 2380 662 915

 00 35 1214 447 460

 00 34 902 007 097

 00 46 7744 52020

Garmin International, Inc
1200 East 151st Street,
Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.

Liberty House, Hounslow Business Park
Southampton, Hampshire, SO40 9LR UK

Garmin Corporation

No. 68, Zhangshu 2nd Road, Xizhi Dist.
New Taipei City, 221, Taiwan (R.O.C.)

Garmin®, nüvi™, and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. nüMaps Guarantee™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.



© 2012 Garmin Ltd. or its subsidiaries



 
Important Safety and Product Information

! WARNING

Failure to avoid the following potentially hazardous situations could result in an accident or collision resulting in death or serious injury.

Installation and Operation Warnings

- When installing the device in a vehicle, place the device securely so it does not obstruct the driver's view of the road or interfere with vehicle operating controls, such as the steering wheel, the foot pedals, or the transmission levers. Do not place the device in front of or above any airbag. (See diagram.)

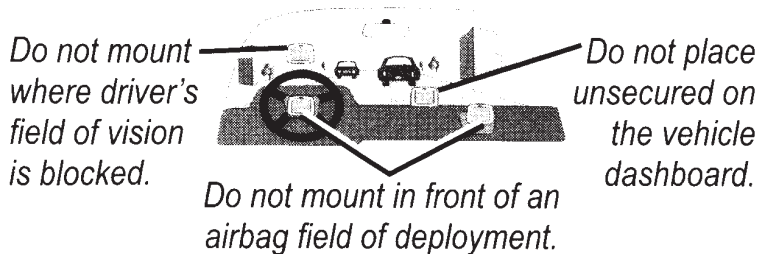

- The windshield mount may not stay attached to the windshield in all circumstances. Do not place the mount where it will become a distraction if the mount should become detached. Keep your windshield clean to help ensure that the mount stays on the windshield.
- Always use your best judgement, and operate the vehicle in a safe manner. **Do not become distracted by the device while driving, and always be fully aware of all driving conditions.** Minimize the amount of time spent viewing the device screen while driving and use voice prompts when possible.

- Do not input destinations, change settings, or access any functions requiring prolonged use of the device controls while driving. Pull over in a safe and legal manner before attempting such operations.
- When navigating, carefully compare information displayed on the device to all available navigation sources, including road signs, road closures, road conditions, traffic congestion, weather conditions, and other factors that may affect safety while driving. For safety, always resolve any discrepancies before continuing navigation, and defer to posted road signs and road conditions.
- The device is designed to provide route suggestions. It is not a replacement for driver attentiveness and good judgement. **Do not follow route suggestions if they suggest an unsafe or illegal maneuver or would place the vehicle in an unsafe situation.**

Battery Warnings

If these guidelines are not followed, the internal lithium-ion battery may experience a shortened life span or may present a risk of damage to the GPS device, fire, chemical burn, electrolyte leak, and/or injury.

- Do not leave the device exposed to a heat source or in a high-temperature location, such as in the sun in an unattended vehicle. To prevent damage, remove the device from the vehicle or store it out of direct sunlight, such as in the glove box.
- Do not puncture or incinerate the device or battery.
- When storing the device for an extended time, store within the following temperature range: from 32° to 77°F (from 0° to 25°C).
- Do not operate the device outside of the following temperature range: from -4° to 131°F (from -20° to 55°C).
- Contact your local waste disposal department to dispose of the device/battery in accordance with applicable local laws and regulations.

Additional User-Replaceable Battery Warnings:

- Do not use a sharp object to remove the battery.

- Keep the battery away from children.
- Do not disassemble, puncture, or damage the battery.
- If using an external battery charger, only use the Garmin accessory approved for your product.
- Only replace the battery with the correct replacement battery. Using another battery presents a risk of fire or explosion. To purchase a replacement battery, see your Garmin dealer or the Garmin Web site.

Additional Non-User-Replaceable Battery Warning:

- Do not remove or attempt to remove the non-user-replaceable battery.

NOTICE

Windshield Mounting Legal Restrictions

Before using the suction cup mount on your windshield, check the state and local laws and ordinances where you drive. Some state laws prohibit drivers from using suction mounts on their windshields while operating motor vehicles. Other state laws allow the suction mount to be located only in specific locations on the windshield. Many other states have enacted restrictions against placing objects on the windshield in locations that obstruct the driver’s vision. **IT IS THE USER’S RESPONSIBILITY TO MOUNT THE GARMIN DEVICE IN COMPLIANCE WITH ALL APPLICABLE LAWS AND ORDINANCES.** Where required, other Garmin dashboard or friction mount options should be used. Always mount your Garmin device in a location that does not obstruct the driver’s view of the road. Garmin does not assume any responsibility for any fines, penalties, or damages that may be incurred as a result of any state or local law or ordinance relating to the use of your Garmin device.

European FM Transmitter Notice

Use of FM transmitters is currently illegal in certain European countries due to specific radio frequency restrictions. You must check the local regulations in all European countries in which you intend to use the

FM transmitter to ensure its legality. You accept full responsibility for complying with all such laws and regulations applicable in your particular country of operation. For a list of countries that currently prohibit the use of FM transmitters and countries that currently require you to obtain a license prior to using the FM transmitter, see www.garmin.com/fm-notice.

Map Data Information

Garmin uses a combination of governmental and private data sources. Virtually all data sources contain some inaccurate or incomplete data. In some countries, complete and accurate map information is either not available or is prohibitively expensive.

Declaration of Conformity

Hereby, Garmin, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full Declaration of Conformity, go to www.garmin.com/declaration-of-conformity.

CE Mark

If the CE Alert mark is present on your device, this device uses frequency bands that are not harmonised throughout the EU, and/or the intended use of the device is subject to restrictions made by one or more Member States.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and may cause

harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet that is on a different circuit from the GPS unit.
- Consult the dealer or an experienced radio/TV technician for help.

This product does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under Part 15 regulations.

Industry Canada Compliance

Category I radiocommunication devices comply with Industry Canada Standard RSS-210. Category II radiocommunication devices comply with Industry Canada Standard RSS-310. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Limited Warranty

This Garmin product is warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within this period, Garmin will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the

customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not apply to: (i) cosmetic damage, such as scratches, nicks and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials or workmanship; (iii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (iv) damage caused by service performed by anyone who is not an authorized service provider of Garmin; or (v) damage to a product that has been modified or altered without the written permission of Garmin. In addition, Garmin reserves the right to refuse warranty claims against products or services that are obtained and/or used in contravention of the laws of any country.

This product is intended to be used only as a travel aid and must not be used for any purpose requiring precise measurement of direction, distance, location or topography. Garmin makes no warranty as to the accuracy or completeness of map data in this product.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL GARMIN BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR ANY TRAFFIC FINES OR CITATIONS, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Garmin retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Garmin authorized dealer or call Garmin Product Support for shipping instructions and an RMA tracking number. Securely pack the device and a copy of the original sales receipt, which is required as the proof of purchase for warranty repairs. Write the tracking number clearly on the outside of the package. Send the device, freight charges prepaid, to any Garmin warranty service station.

Online Auction Purchases: Products purchased through online auctions are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. To obtain warranty service, an original or copy of the sales receipt from the original retailer is required. Garmin will not replace missing components from any package purchased through an online auction.

International Purchases: A separate warranty may be

provided by international distributors for devices purchased outside the United States depending on the country. If applicable, this warranty is provided by the local in-country distributor and this distributor provides local service for your device. Distributor warranties are only valid in the area of intended distribution. Devices purchased in the United States or Canada must be returned to the Garmin service center in the United Kingdom, the United States, Canada, or Taiwan for service.

Australian Purchases: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits under our Limited Warranty are in addition to other rights and remedies under applicable law in relation to the products.

Garmin Australasia
Unit 19, 167 Prospect Highway
Seven Hills, NSW, Australia, 2147
Phone: 1800 822 235



© 2006–2011 Garmin Ltd. or its subsidiaries



Garmin International, Inc.
1200 East 151st Street,
Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House,
Hounslow Business Park,
Southampton, Hampshire,
SO40 9LR UK

Garmin Corporation
No. 68 Zhangshu 2nd Road
Xizhi Dist., New Taipei City,
221, Taiwan (R.O.C.)

www.garmin.com

October 2011

Part Number 190-00720-01 Rev. K

Printed in Taiwan