



- NOTE 1. Remove 1000 ohm resistor across Pins 9 & 12 when 1000 ohm external meter is used. (In chassis CN177A thru CN177C2.)
- Do not connect external To-From meter. Serious degradation of To-From sensitivity will result.
 - See Section 2. 13 for additional details on marker connections.
 - Resistor not required for chassis numbered CN177D and later.

Figure 2-13. INTERCONNECTION DIAGRAM VOA-50M/MK 24/UGR-2/MBT-R