


NAV/COMM

**TERRA  
 TXN - 960**

Connector

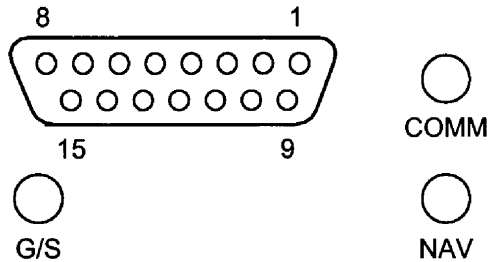

| Circuit                 | Pin # | Notes  |
|-------------------------|-------|--------|
| AUTOPILOT + OUT .....   | 15    | Note 1 |
| AUX AUDIO IN.....       | 7     |        |
| HEADPHONE OUT.....      | 11    |        |
| INTERCOM KEY.....       | 14    |        |
| LAMP DIMMER.....        | 13    |        |
| MIC AUDIO IN .....      | 5     |        |
| MIC KEY IN.....         | 6     |        |
| N/C.....                | 10    | Note 2 |
| NAV 2 INPUT .....       | 2     | Note 2 |
| NAV 2 INVERT .....      | 9     | Note 2 |
| NAV SELECT.....         | 8     | Note 2 |
| POWER GROUND.....       | 4     |        |
| POWER IN 13.75 VDC..... | 1     |        |
| SIDETONE.....           | 3     | Note 3 |
| SPKR OUT.....           | 12    |        |

Notes

1. Use ground as - output.
2. For Loran C option, 9 LORAN + R, 8 LORAN + L, 2 LORAN + FLAG, 10 LORAN - FLAG. No Loran, ground 8 for NAV 2.
3. For Sidetone, 3 to 11.

For familiarization only. Consult the manufacturers current data.