


## NAV/COMM

# TERRA

## TXN - 960

## Connector

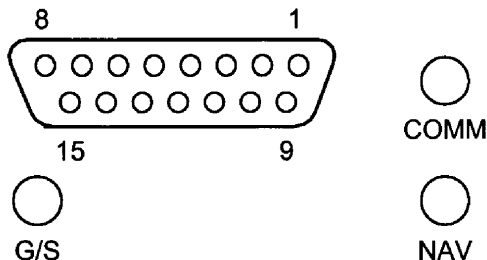

Circuit	Pin #	Notes
AUTOPILOT + OUT .....	15	Note 1
AUX AUDIO IN .....	7	
HEADPHONE OUT .....	11	
INTERCOM KEY .....	14	
LAMP DIMMER .....	13	
MIC AUDIO IN .....	5	
MIC KEY IN .....	6	
N/C .....	10	Note 2
NAV 2 INPUT .....	2	Note 2
NAV 2 INVERT .....	9	Note 2
NAV SELECT .....	8	Note 2
POWER GROUND .....	4	
POWER IN 13.75 VDC .....	1	
SIDETONE .....	3	Note 3
SPKR OUT .....	12	

## Notes

1. Use ground as - output.
2. For Loran C option, 9 LORAN + R, 8 LORAN + L, 2 LORAN + FLAG, 10 LORAN - FLAG. No Loran, ground 8 for NAV 2.
3. For Sidetone, 3 to 11.

For familiarization only. Consult the manufacturers current data.